

ENERGY FR

Technical Specifications

Composition: 92% POLYESTER, 8% POLYAMIDE

Width: 140 cm. UNE 400335

Weight m2: 400 gr/m2

Tensile strenght: >20 N > 3 daN DIN 53859-5

Tear displacement: Warp: < 4 mm - Weft: < 6 mm PR EN ISO 13936-2 (mm)

Abrasion resistance: >40.000 cycles UNE EN ISO 12947

Pilling resitance: > 4 no pilling (ISO DIS 12945-2)

Dye resistance to rubbing: 4 Good (ISO 105-X12)

Dye resistance to light: 6 Good (ISO 105-B02)





energy 1



energy 10



energy 11



energy 13



ENERGY 14



ENERGY 15



energy 16



energy 17



ENERGY 18



ENERGY 19



energy 2



ENERGY 20



ENERGY 21



ENERGY 23



ENERGY 24



energy 25



ENERGY 26



ENERGY 27



ENERGY 28



ENERGY 29



ENERGY 3



ENERGY 30



ENERGY 31



ENERGY 32



ENERGY 35



ENERGY 36



ENERGY 37



ENERGY 38



ENERGY 39



ENERGY 4



ENERGY 41



ENERGY 42



ENERGY 43



ENERGY 44



ENERGY 45



energy 5



energy 6



energy 7



ENERGY 8



energy 80



energy 81



ENERGY 9

The color of the displayed images may not correspond to the final product. Please consult your furniture store.

CLEANING AND MAINTENANCE INSTRUCTIONS

For normal sofa maintenance we recommend that you vacuum the entire surface area regularly. You can use a normal home vacuum cleaner with a brush fitting.

Water cleaning in three simple steps



1. Remove any excess residue on the upholstery.
2. Apply water over the stain, either directly or using a damp cloth. Wait a few seconds.
3. Press down over the stain with the damp cloth and rub gently over the fabric using circular movements. If the stain does not come off completely, repeat the process as required.

Now, you can clean stains with just water

Aquaclean® Technology enables you to get rid of small stains such as wine, coffee, food and even most marker pens without having to wash with soap or detergent.

Maintenance and cleaning

· LIQUIDS OR OILS

Absorb the excess liquid or oil with a cloth or paper towel, then rub gently with circular movements.

· GREASE, PEN INK

Apply water over the stain, either directly or using a damp cloth, leave on the fabric for a few seconds, then rub the stain gently with circular movements. Repeat the process as many times as necessary. Always leave the fabric to dry.

· DUST

Remove the dust with a vacuum cleaner.

Washing

WASHING INSTRUCTIONS

For normal care, you don't need to remove and wash the sofa fabric. But for large or tough stains, before washing review the following instructions:

- Machine wash, delicate cycle (maximum 40°C).
- Use neutral detergents.
- Do not spin dry.
- No bleach.
- Do not dry in tumbler.
- Do not dry in sunlight.
- Do not squeeze or wring.
- Iron inside out.
- Use soft brush.